

# Modern Bird House Plan

## Measure and Cut Materials to the following sizes:

- Front - 14 cm x 20cm x 2cm
- Sides (2) – 14 cm x 20cm x 2cm
- Roof – 14cm x 21cm x 2cm
- Back – 14cm x 28cm x 2cm
- Bottom – 14cm x 10cm x 2cm
- ¼” Dowel – 6cm

## Tools Required:


- Drill Press, Mitre Saw, Band Saw, Drill Press/Cordless Drill, Hammer, Nails, Wood Glue

## Safety:

- Safety Glasses
- Hearing Protection

## Procedure:

- Measure and cut softwood to appropriate dimensions as listed above. Clearly label each piece by name and dimension IN PENCIL!
- Drill Holes in FRONT piece of wood:
  1. Drill ¼” hole 10 cm up from the bottom, all the way through the wood. A ¼” dowel will be inserted for for the birds to perch on.
  2. Drill a 1-1/8” hole for the bird entrance to the house 14cm up from the bottom.

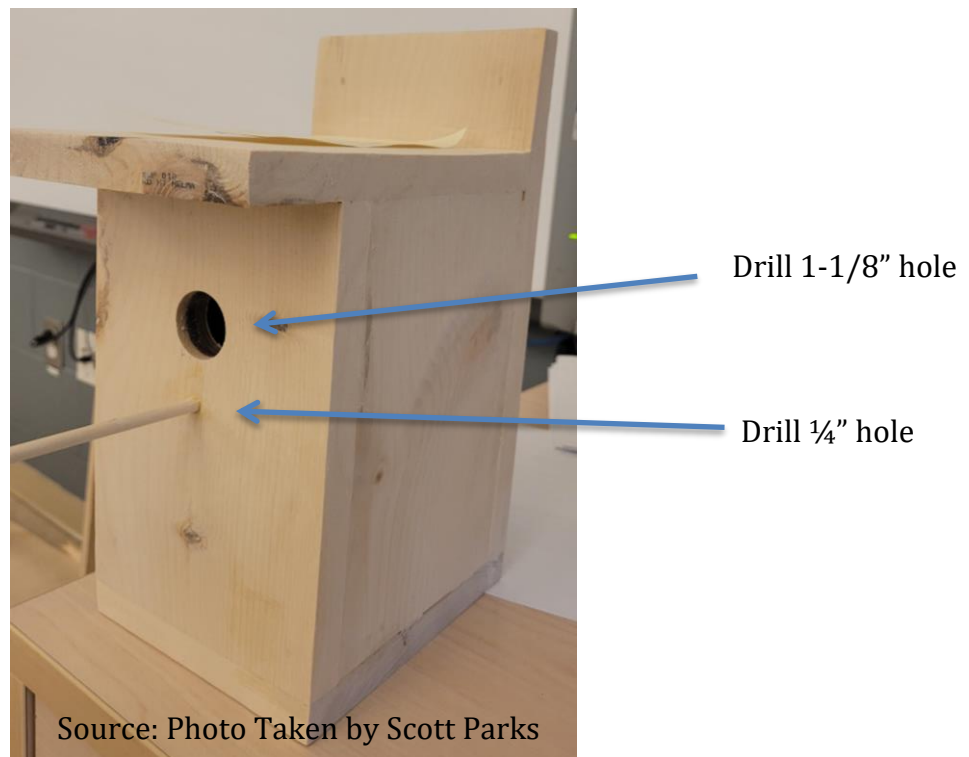

**Final Assembly:** Assemble pieces into the appropriate orientation. Glue And Nail to assemble birdhouse.